
















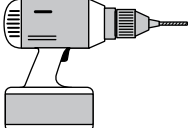


**ROLL-A-SHADE®**  
MANUFACTURING SUN CONTROL SOLUTIONS

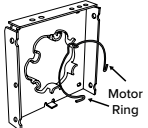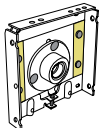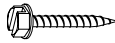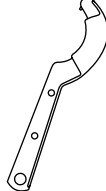12101 Madera Way  
Riverside, CA 92503  
Phone: 888-245-5077  
Fax: 951-245-5075  
www.rollashade.com

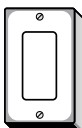

## RAS - Installation Instructions Contract Plus+ Shade 4" Bottom Fascia Motorized UL

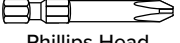Hardware Included						Tools Supplied	Tools Required
							
Motor Bracket	Double Bearing Pin End Bracket	1/4" x 1" Wood Screws (If requested)	1/4" x 5/8" Self Tapping Screws	Wire Tie Kit			1/4" Hex Head
							
Remote (Optional)	Repeater (Optional)	Wall Switch (Optional)	Wall Switch (Optional)	Drywall Anchors	Bracket Cover (Optional)		Phillips Head
							
			Fascia				Drill




### 1. Install Bracket

Install star head motor bracket. Then, install double bearing pin end bracket. Make sure **ALL** brackets are level.

**Note: Brackets may not be rotated for side mount**


**Note: If screws do not secure into stud, use supplied drywall anchors.**

**Note: Must be at least two screws in every bracket**

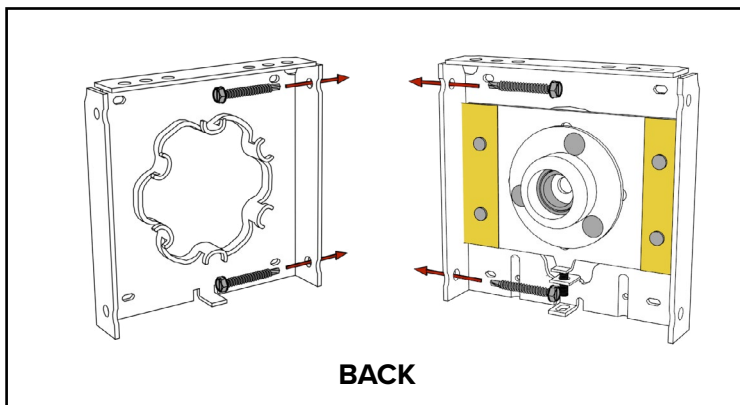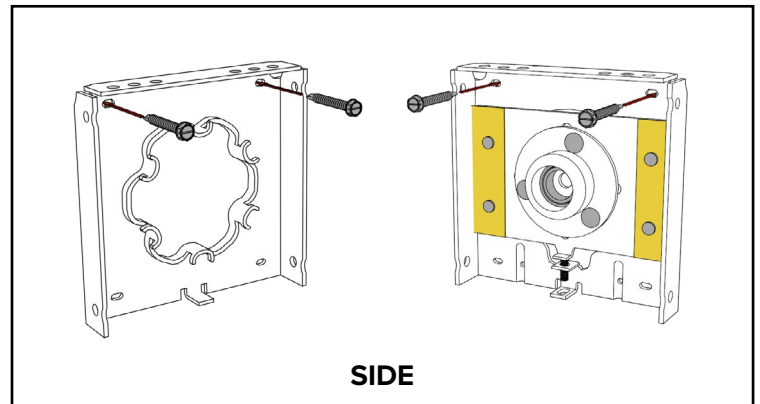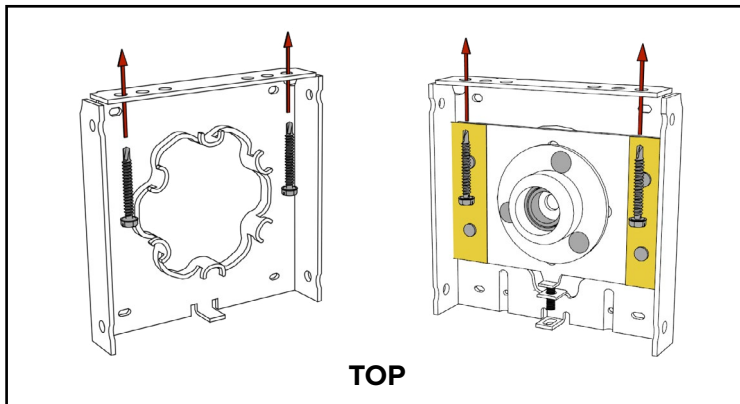

### \*Pro Tip\*


All pin ends & links are retractable to rotate, simply follow instructions on pin end or link. Wrench provided for your convenience.

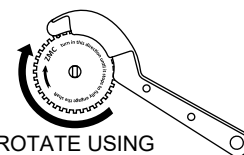

ROTATE USING  
ADJUSTMENT  
WRENCH TO RELEASE



## 2. Install Single Shade

Insert the star end of the motor into the bracket (A). Rotate pin end (B) to retract pin (C). Insert pin into bracket and release pin with adjustment wrench (D). Slide the locking ring up through the grooves of the motor bracket and motor (E).

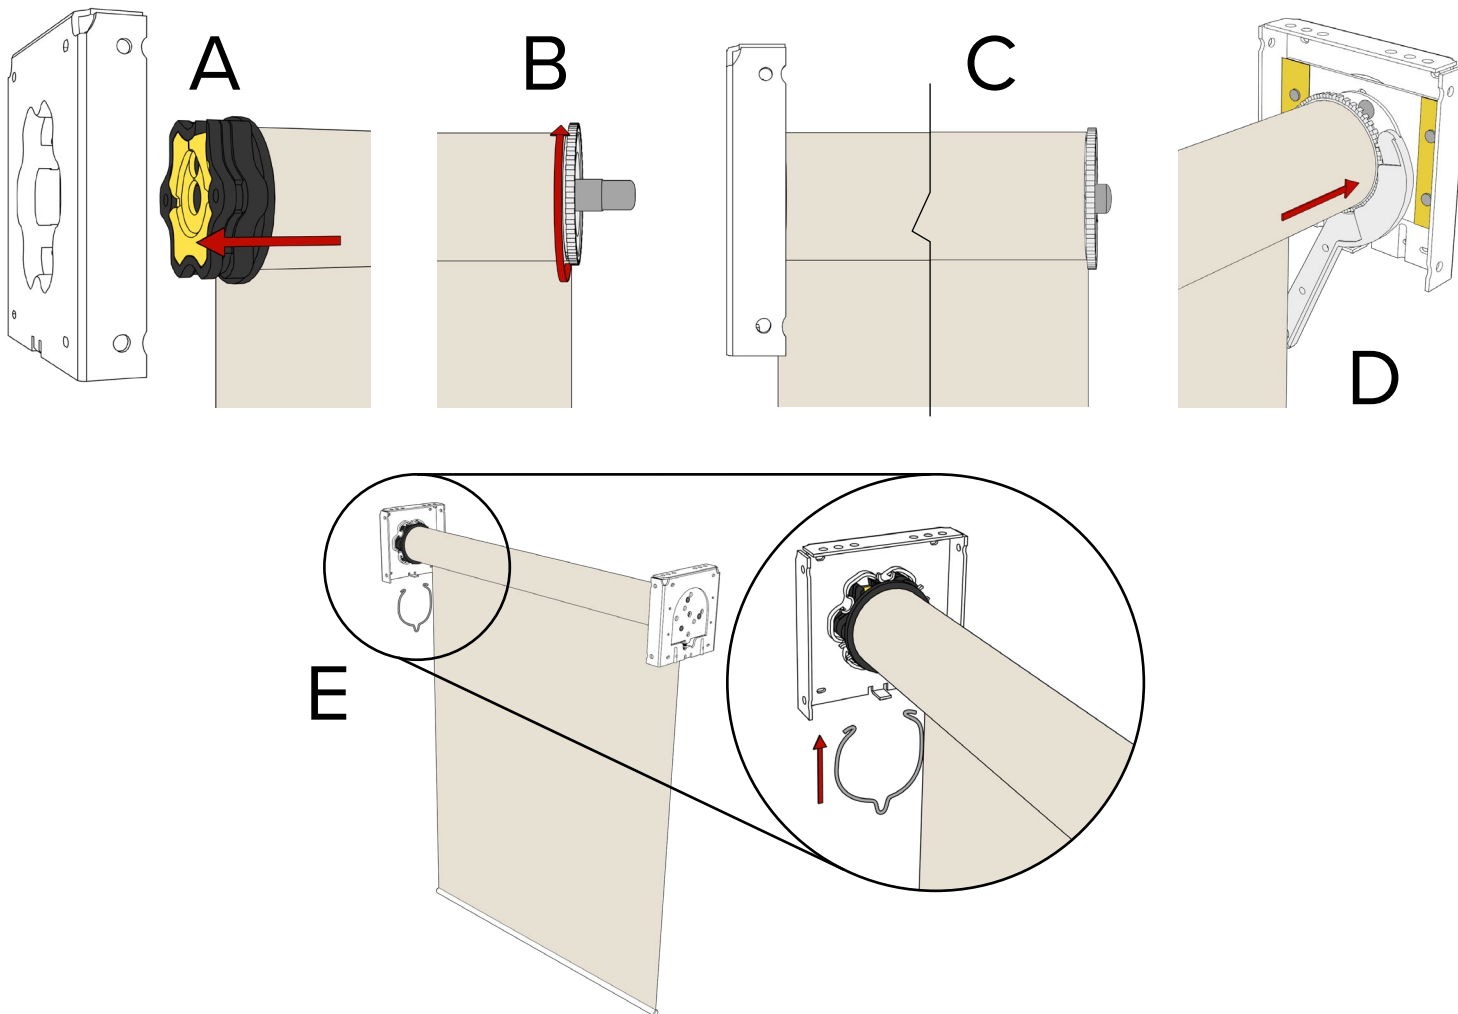

## 3. Shade Leveling (If Necessary)

Use a level to make sure all shades are level. If the shade is not level after installation, the pin end brackets can be adjusted. Inside each bracket is an Allen wrench (F). Use Allen wrench to raise or lower the shade to level the tubes (G). Do not over tighten or loosen the screw. If adjustable bracket does not fix all tracking, refer to step 5.

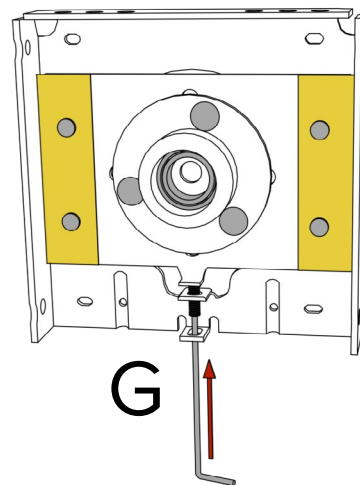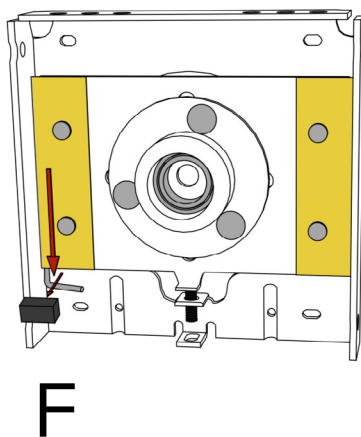


#### 4. Plug in Motor

Run motor power cord to nearest power outlet. Install wire tie pads and secure with zip ties to hold wire down. The path of the wire should be parallel with mullions and/or drop ceiling tiles ensuring the cable is neatly organized.


- To reduce the risk of electric shock, this equipment has a grounding type plug, that has a third (grounding) pin.
- This plug will only fit into a grounding type outlet. If the plug does not fit into the outlet, contact a qualified electrician to install the proper outlet.
- Do not change the plug in any way.
- Do not use an extension cord. If the power supply is too short, have a licensed electrician install an outlet near the drapery operator.

**WARNING: Failure to wire as instructed may cause personal injury or damage to device or equipment.**

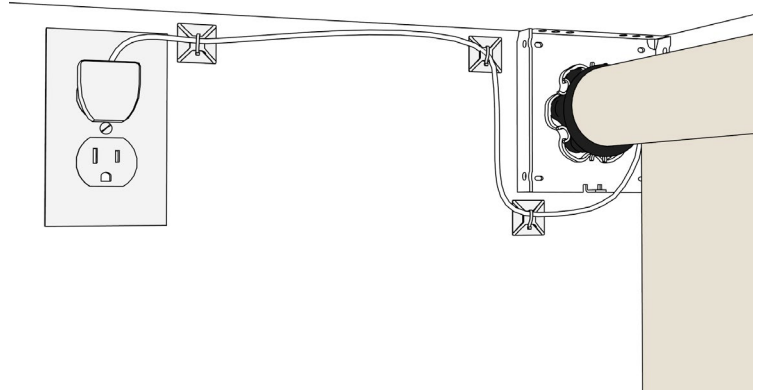


#### 5. Shade Tracking (If Necessary)

Roll shade up and down to confirm hembar or bottom rail is level and material rolls straight on center tube. If the hembar or bottom rail is not level, lower shade until you see the metal tube. Add layers of masking tape to the metal tube to the end that is too low until hembar or bottom rail is straight. If the material tracks to one side, lower shade until the metal tube is visible. Add layers of masking tape to the metal tube to the end that is opposite the direction of tracking, until shade rolls up straight.

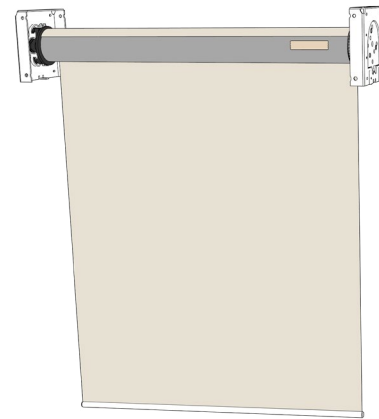

#### 6. Install the Fascia

Place the top hanger arm of the fascia into the corner openings of the brackets on the 4 inch side (Fig. 1). Gently push the hooked bottom onto the bracket (Fig. 2) insuring each side is locked.

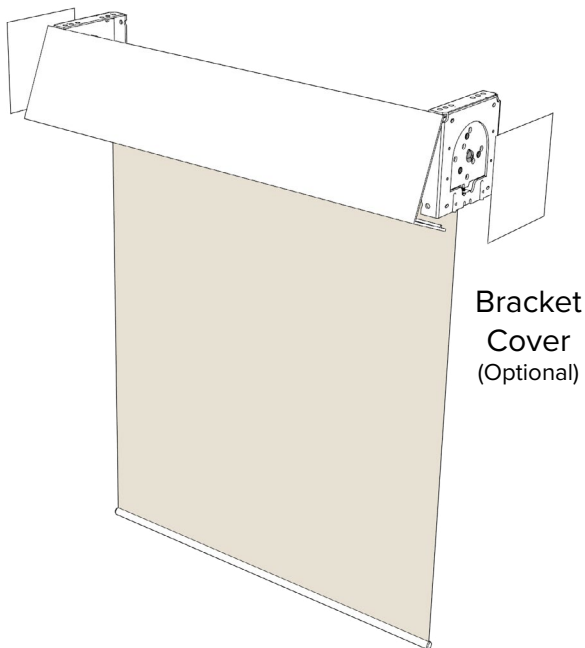

Bracket  
Cover  
(Optional)

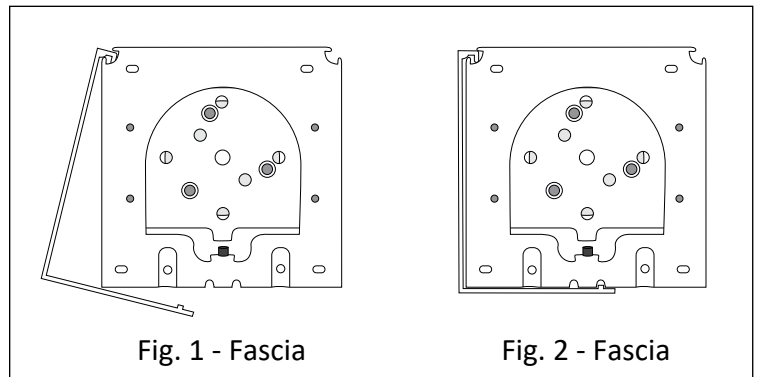


Fig. 1 - Fascia

Fig. 2 - Fascia