



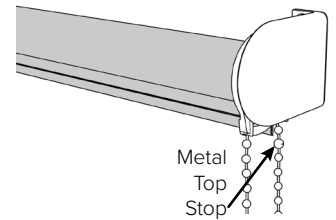


## 5. Install Metal Stop Ball to Bead Chain

Pull the rear chain to lower the shade to appropriately 1/4" above sill and attach connector or stop ball to upper most bead on front chain closest to the clutch. By attaching this connector or stop ball you will set how far the shade will lower. Pull the front chain and raise the shade so the bottom rail is 5" below the shade and attach a connector or stop ball on the back chain at upper most bead.

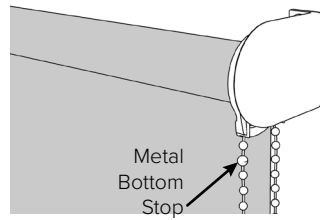


## 6. Install Chain Anchor

The chain anchor is a plastic piece that is attached to the chain to secure it from possible accidents. Position the chain anchor on the window frame so that the chain anchor and chain do not interfere with raising or lowering the shade. The chain anchor should be installed without stretching or pulling down on the chain. Leave a little play through the chain anchor to allow the chain to pass freely. Do not twist or cross the bead chain. Secure the anchor with Phillips screws in both upper and lower holes.

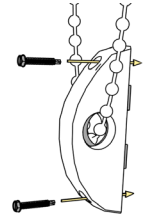

Warning: Failure to use this device may cause injury or death




### Window Blind Cord Can STRANGLE Your Child


- Children can climb furniture to reach cords
- Move cribs and other furniture away.
- Keep all cords out of children's reach.
- Attach tension device to wall or floor.
- Fasteners provided with the tension device may not be appropriate for all mounting surfaces.
- Use appropriate anchors for the mounting surface conditions.



HARDWARE INCLUDED



Tension Device + Chain

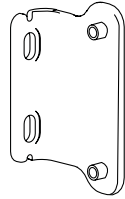

Tension Device Bracket




Short Screws




Screws

TOOLS REQUIRED




3/8" Hex Head



Phillips Head




1/8" Drill Bit



Drill

INSIDE OR OUTSIDE APPLICATION

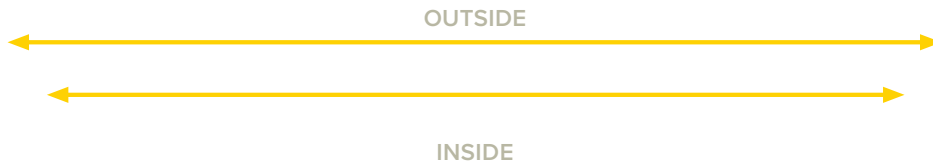

## INSIDE MOUNT & TENSION DEVICE INSTALLATION

Pull the Chainhold down until the chain is fully tensioned (plunger will be fully raised). Screw device into wall.

A

KEEP  
TENSION



B



C

SECURE  
TENSION  
DEVICE




**NOTE:** Please make sure shade operates smoothly.

## OUTSIDE MOUNT & TENSION DEVICE INSTALLATION

With provided screws, install bracket first with large screws (use Chainhold marked screw hole locations as reference). Pull the Chainhold down until the chain is fully tensioned (plunger will be fully raised). Install Chainhold into bracket with small screws.


A

PULL CHAIN  
DOWN &  
MARK  
LOCATION

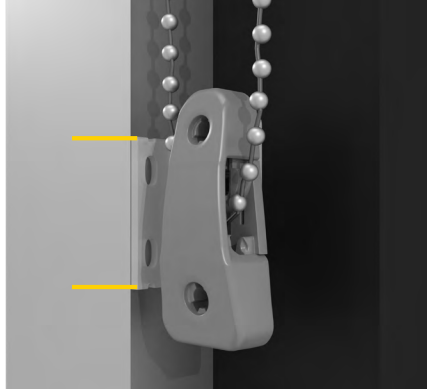


B


REMOVE  
TENSION  
DEVICE  
& DRILL

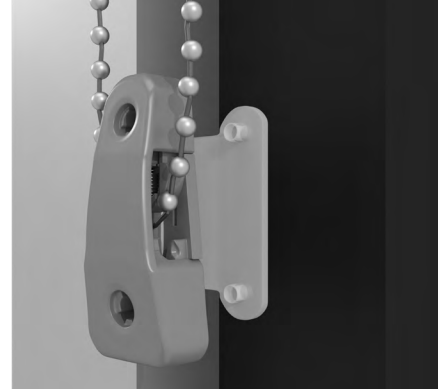

C

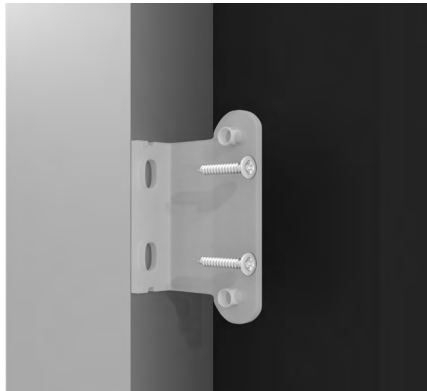

D

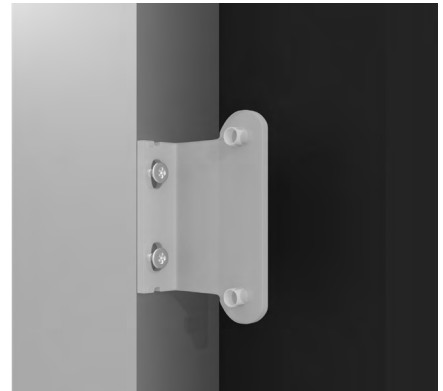


E

PLACE  
TENSION  
DEVICE  
ON  
BRACKET



F

SECURE  
TENSION  
DEVICE

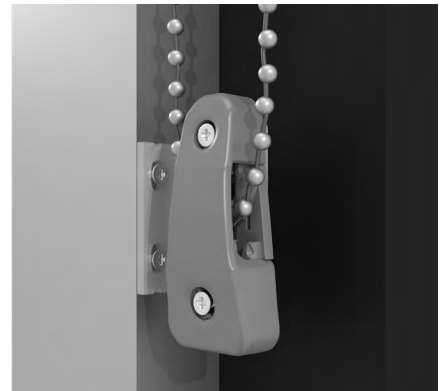

**NOTE:** Please make sure shade operates smoothly.