










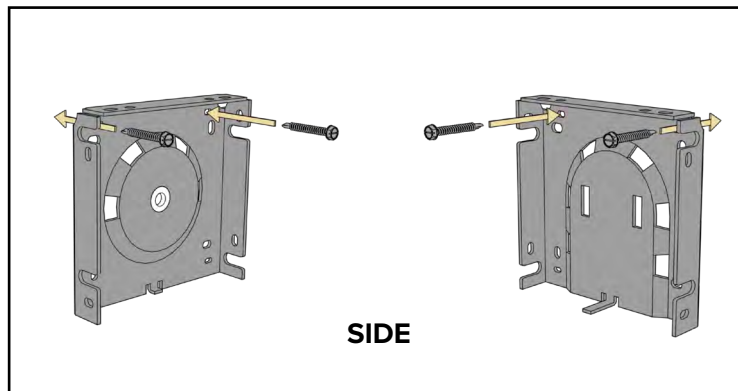
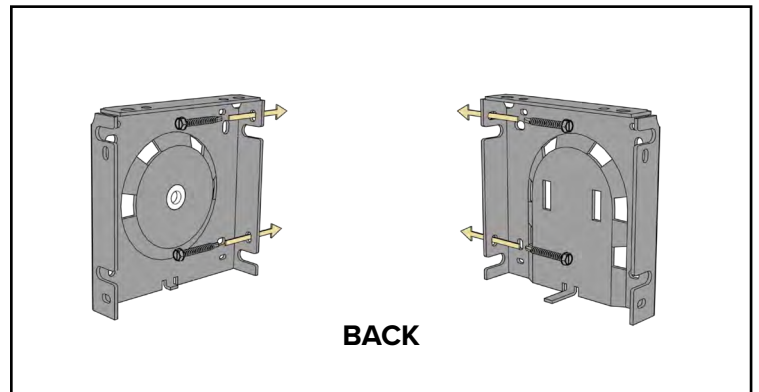
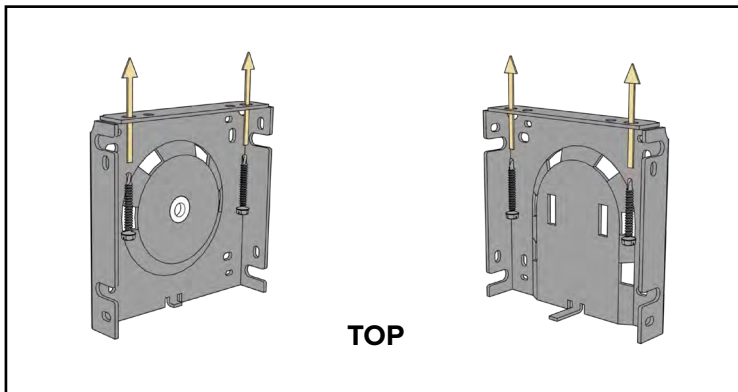


RAS - Installation Instructions Plus+ Shade 4" Bottom Fascia Manual

Hardware Included						Tools Required	
							
Self Tapping Screws for Aluminum	Wood Screws (If requested)	Self Tapping Phillips Screws for Tension Device	Drywall Anchors	Brackets	Bracket Cover (Optional)	Drill	1/4" Hex Head
							
			Metal Stop Ball		Fascia		Phillips Head

1. Install Bracket



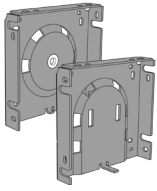
Attach the brackets to the window frame, molding, wall or ceiling. Brackets are directional oriented, control side has indents for clutch and in end bracket has a small hole for pin end. (picture shows a right control install). Indents in sides can be used for easier access when screwing from the side. Two screws must be installed in each bracket.




2. Install Shade

Push the clutch straight into the indents in the bracket. The bottom of the clutch should always point straight down (Fig A). Next, using your finger or a flat end screwdriver, press in the pin end, keeping it compressed (Fig B) while maneuvering it into the hole in the pin end bracket (Fig C).


Note: If you need to remove the shade, compress the pin end by using a flat end screwdriver and pull the shade down and out.

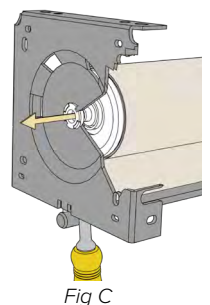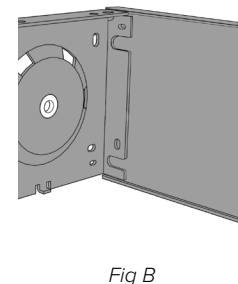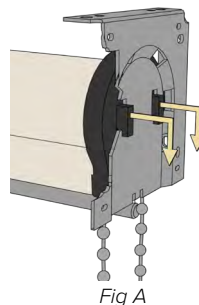

HARDWARE INCLUDED



Tension Device + Chain

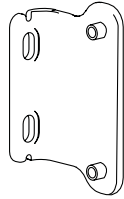

Tension Device Bracket




Short Screws




Screws

TOOLS REQUIRED




3/8" Hex Head



Phillips Head




1/8" Drill Bit



Drill

INSIDE OR OUTSIDE APPLICATION

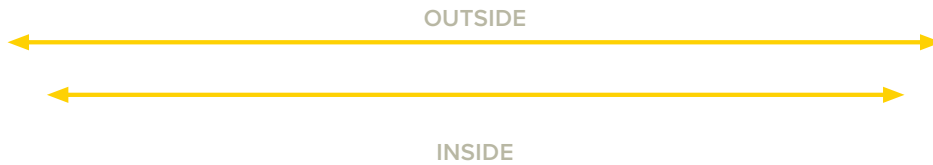

INSIDE

OUTSIDE

INSIDE MOUNT & TENSION DEVICE INSTALLATION

Pull the Chainhold down until the chain is fully tensioned (plunger will be fully raised). Screw device into wall.

A

KEEP
TENSION



B



C

SECURE
TENSION
DEVICE




NOTE: Please make sure shade operates smoothly.

OUTSIDE MOUNT & TENSION DEVICE INSTALLATION

With provided screws, install bracket first with large screws (use Chainhold marked screw hole locations as reference). Pull the Chainhold down until the chain is fully tensioned (plunger will be fully raised). Install Chainhold into bracket with small screws.


A

PULL CHAIN
DOWN &
MARK
LOCATION

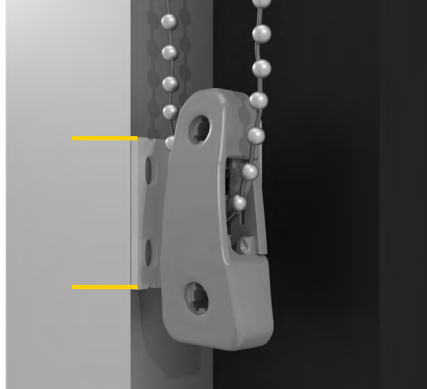


B


REMOVE
TENSION
DEVICE
& DRILL

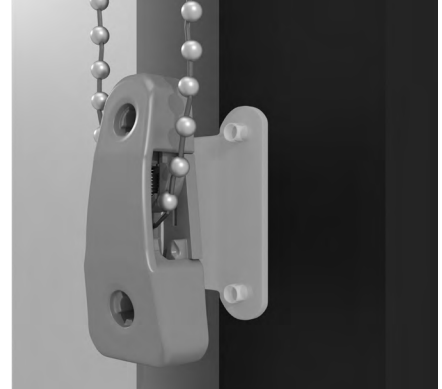

C

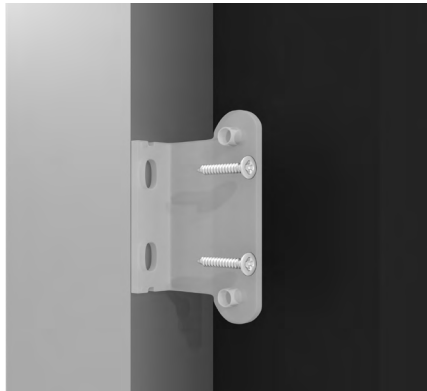

D

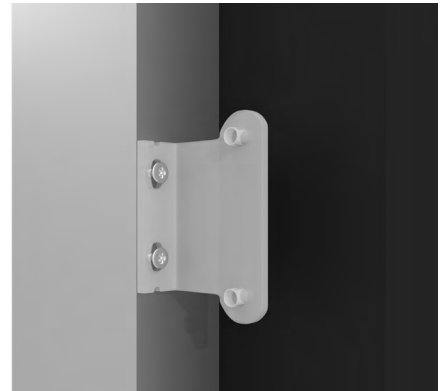


E

PLACE
TENSION
DEVICE ON
BRACKET



F

SECURE
TENSION
DEVICE

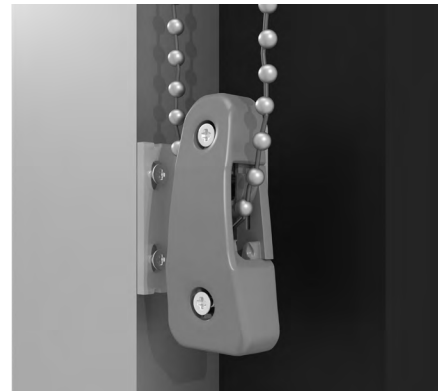

NOTE: Please make sure shade operates smoothly.