






SHIM TENSION DEVICE INSIDE MOUNT INSTALLATION INSTRUCTIONS

Rollashade.com
info@rollashade.com
951.245.5077


RAS-INS-MAR-TD-003-Rev1 © Copyright Roll A Shade® Inc. All Rights Reserved.

 ROLL A SHADE

HARDWARE INCLUDED

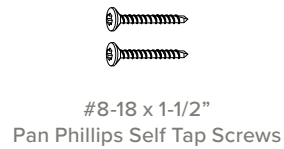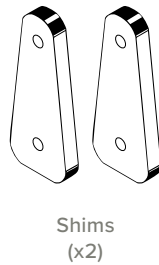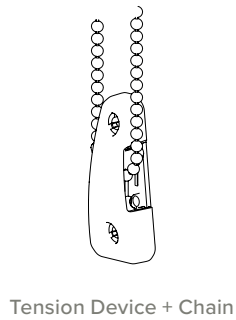

TOOLS REQUIRED

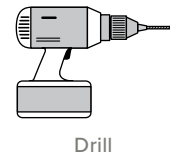


INSIDE MOUNT SHIM & TENSION DEVICE INSTALLATION

A Install Shims as needed (No more than 3).




B Pull the Chainhold down until the chain is fully tensioned (plunger will be fully raised)

KEEP
TENSION

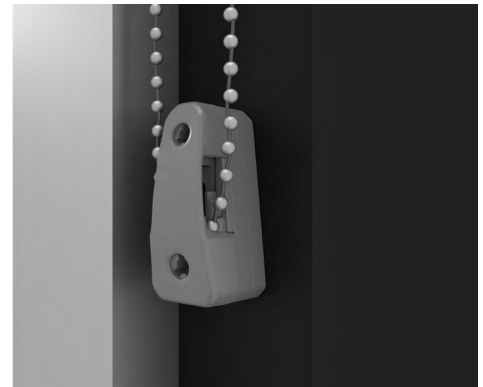


C Screw device into wall.

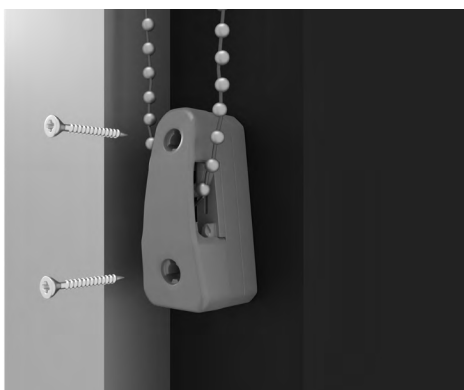

D

SECURE
TENSION
DEVICE

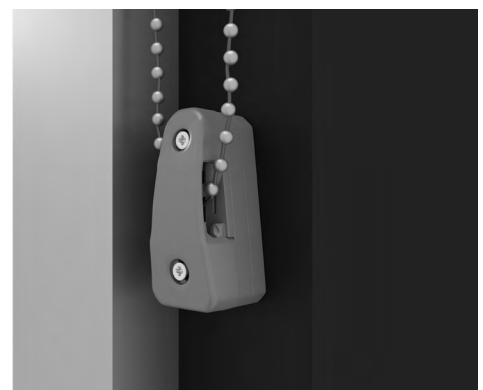

NOTE: Please make sure shade operates smoothly.
Shims should **NEVER** be installed on a tension device bracket.