




TENSION DEVICE INSIDE & OUTSIDE MOUNT INSTALLATION INSTRUCTIONS

Rollashade.com
info@rollashade.com
951.245.5077


RAS-INS-MAR-TD-001-Rev1 © Copyright Roll A Shade® Inc. All Rights Reserved.

 ROLL A SHADE

HARDWARE INCLUDED



Tension Device +
Chain

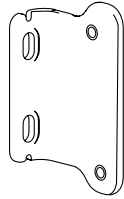

Tension Device
Bracket




Short
Screws



Screws

TOOLS REQUIRED




3/8" Hex Head



Phillips Head





1/8" Drill Bit



Drill

INSIDE OR OUTSIDE APPLICATION

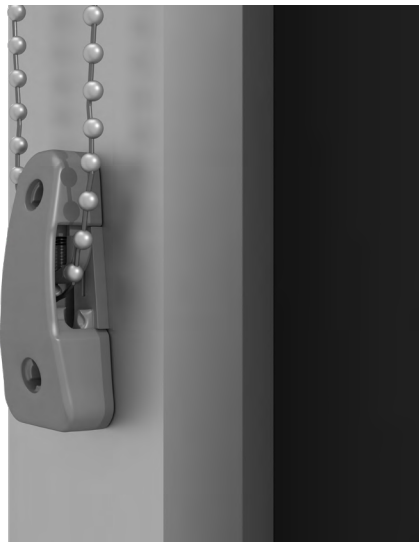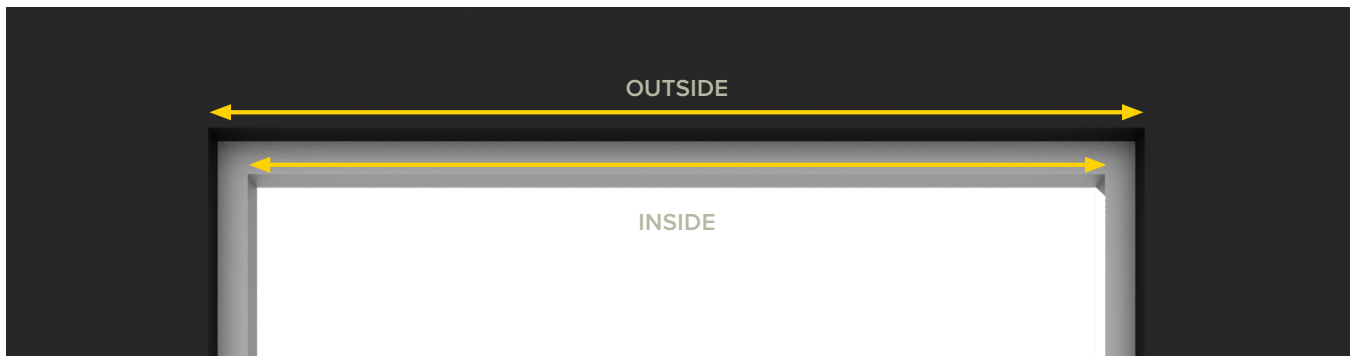

INSIDE



OUTSIDE

INSIDE MOUNT & TENSION DEVICE INSTALLATION

Pull the Chainhold down until the chain is fully tensioned (plunger will be fully raised). Screw device into wall.

A

KEEP
TENSION



B



C

SECURE
TENSION
DEVICE




NOTE: Please make sure shade operates smoothly.

OUTSIDE MOUNT & TENSION DEVICE INSTALLATION

With provided screws, install bracket first with large screws (use Chainhold marked screw hole locations as reference). Pull the Chainhold down until the chain is fully tensioned (plunger will be fully raised). Install Chainhold into bracket with small screws.

A

PULL CHAIN
DOWN &
MARK
LOCATION

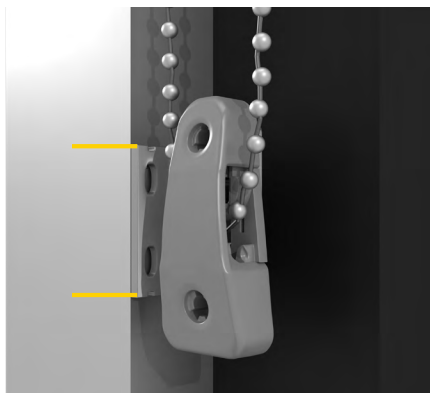

B

REMOVE
TENSION
DEVICE
& DRILL



C



D



E

PLACE
TENSION
DEVICE ON
BRACKET



F

SECURE
TENSION
DEVICE



NOTE: Please make sure shade operates smoothly.




TENSION DEVICE FLOOR INSIDE & OUTSIDE MOUNT INSTALLATION INSTRUCTIONS

Rollashade.com
info@rollashade.com
951.245.5077


RAS-INS-MAR-TD-002-Rev1 © Copyright Roll A Shade® Inc. All Rights Reserved.

 ROLL A SHADE

HARDWARE INCLUDED



Tension Device +
Chain

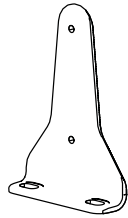

Tension Device
Floor Bracket




Short
Screws



Screws

TOOLS REQUIRED




3/8" Hex Head



Phillips Head





1/8" Drill Bit



Drill


INSIDE OR OUTSIDE APPLICATION

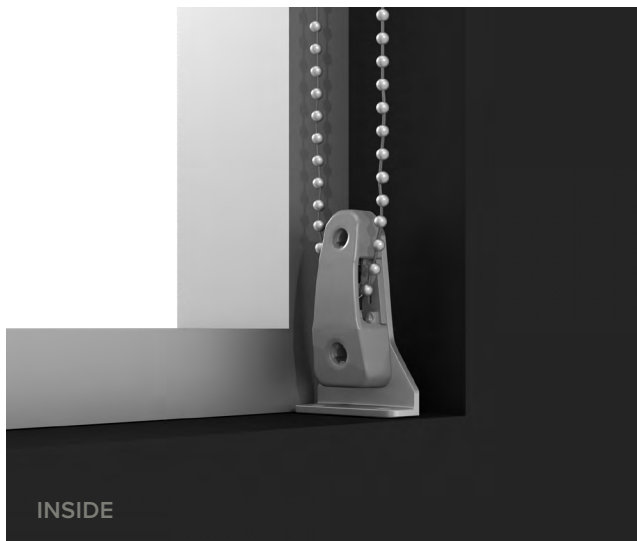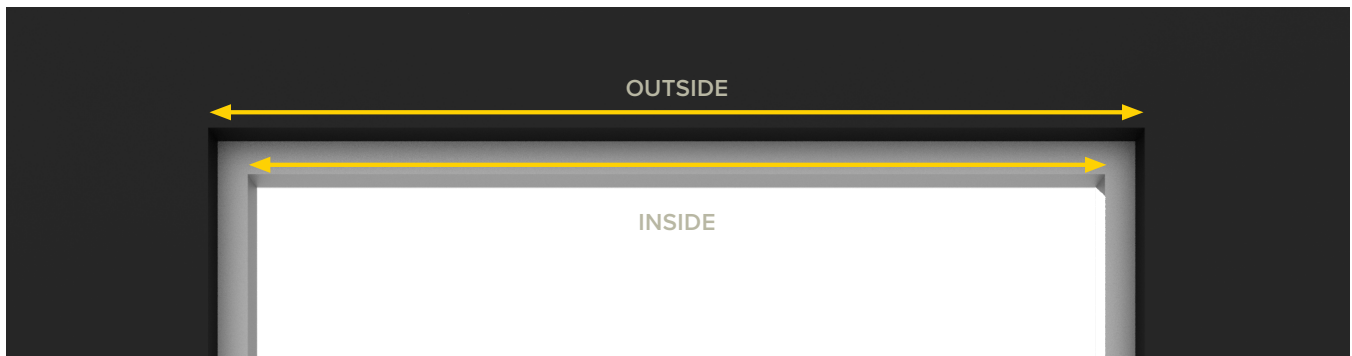

OUTSIDE MOUNT & TENSION DEVICE INSTALLATION

With provided screws, install bracket first with large screws (use Chainhold marked screw hole locations as reference). Pull the Chainhold down until the chain is fully tensioned (plunger will be fully raised). Install Chainhold into bracket with small screws.

A

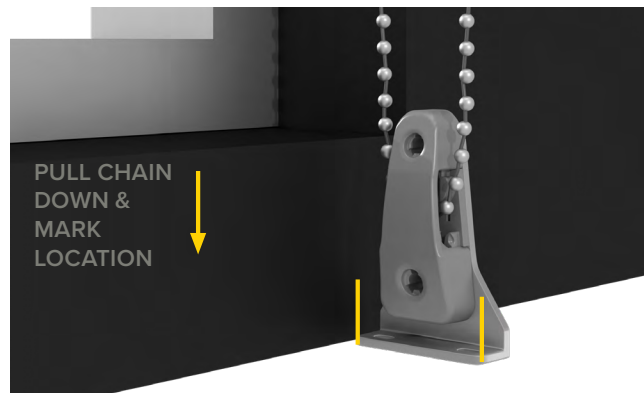

B



C



D



E



F



NOTE: Please make sure shade operates smoothly.