





PLUS⁺ SHADE 5.5" BOTTOM & TOP FASCIA INSTALLATION INSTRUCTIONS



Rollashade.com
info@rollashade.com
951.245.5077


RAS-INS-MAR-PLS5.5-002-Rev1 © Copyright Roll A Shade® Inc. All Rights Reserved.

 ROLL A SHADE


EQUIPMENT LIST

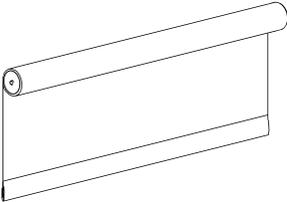HARDWARE INCLUDED				
				
Left Idle End Bracket	Right Control Motor Bracket	Shades + Motors	Bracket Covers (Optional)	Fascia

TOOLS	
LABEL	IMAGE OF TOOL
Drill	
Phillips Head & 6" Extension	
Hex Head Driver	
1/16" Drill Bit	


SCREWS		
LABEL	IMAGE OF SCREW	DRILL BIT TO USE
#8 X 1.5" Hex Head Wood Screw		1/16" Drill Bit
#8-18 x 1-1/2" Pan Phillips Tension Device Self Tap		N/A
#8-18 x 3/4" PH Pan HD Screw Tension Device Self Tap		N/A
#8-18 x 5/8" Hex Tek #2 Bit		N/A

BUSHINGS FOR DUAL SHADE INSTRUCTIONS

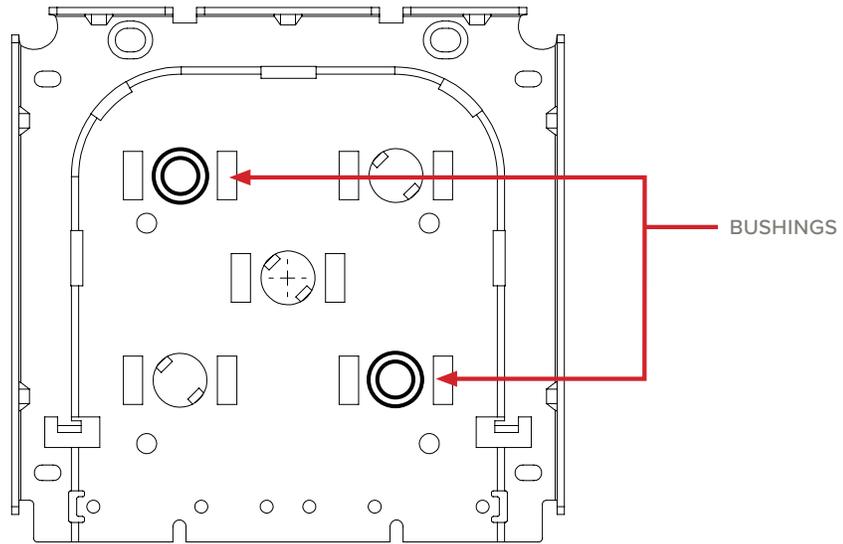

- 2 bushings included per set
- Bushings are to secure idler pin end
- Bushings can be removed and relocated if needed

BUSHINGS FOR SINGLE SHADE INSTRUCTIONS

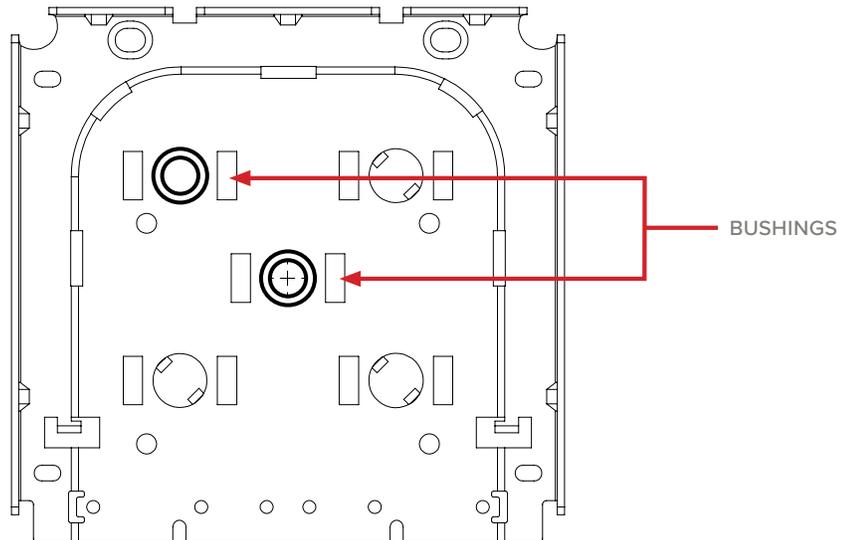


- 2 bushings included per set
- Bushings are to secure idler pin end
- The bushing located off center can be removed and relocated as needed (Spare Bushing)


1 INSIDE OR OUTSIDE APPLICATION

****NOTE: ALL SHADES MAY BE PRE-PROGRAMMED TO SENSORS, REMOTES, AND/OR WALL SWITCHES UPON ARRIVAL****


****NOTE: RIGHT CONTROL INSTALLATION****

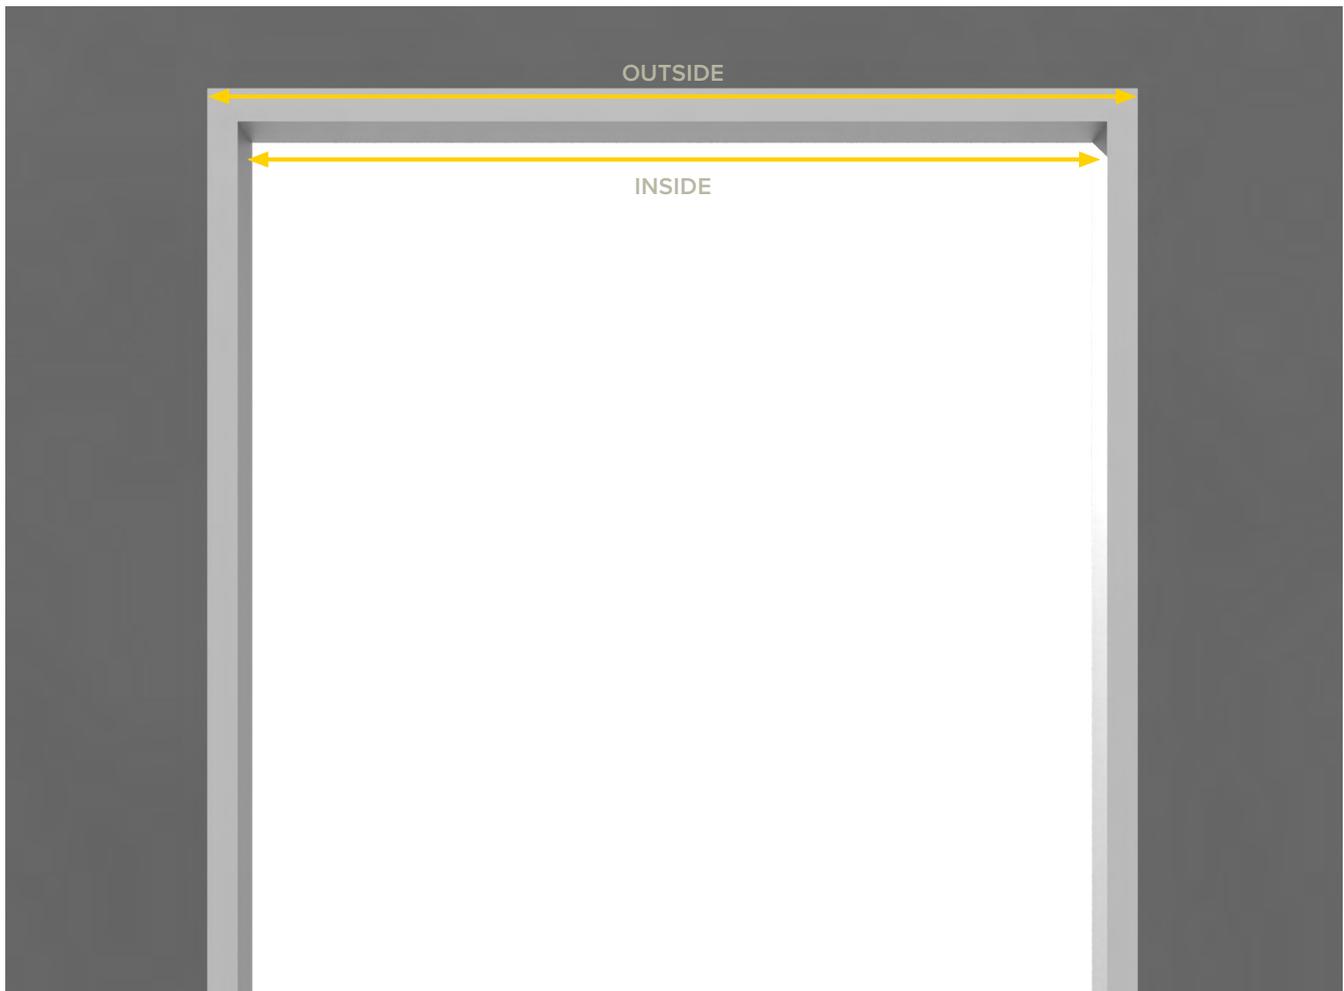

A INSIDE MOUNT

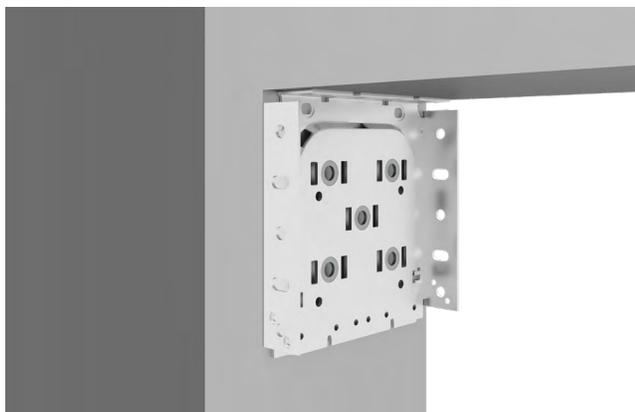


B OUTSIDE MOUNT

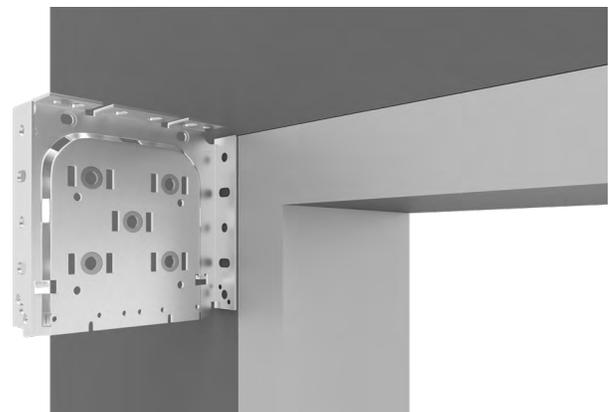


2 BRACKET COVERS INSTALLATION (OPTIONAL)

Install bracket covers before drilling in brackets.

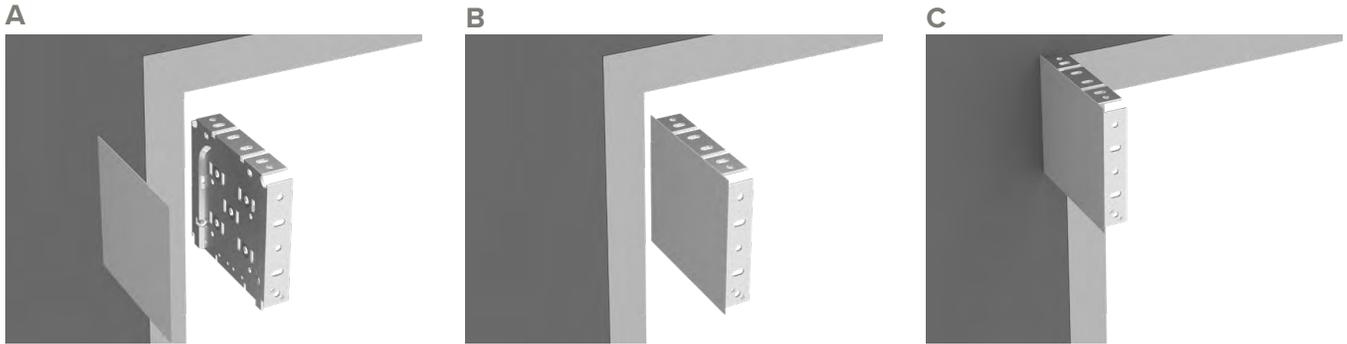


3 MOUNTING LOCATION

Place your first bracket in its mounting location and mark the screw holes. As seen in image 3B and repeat for other bracket.

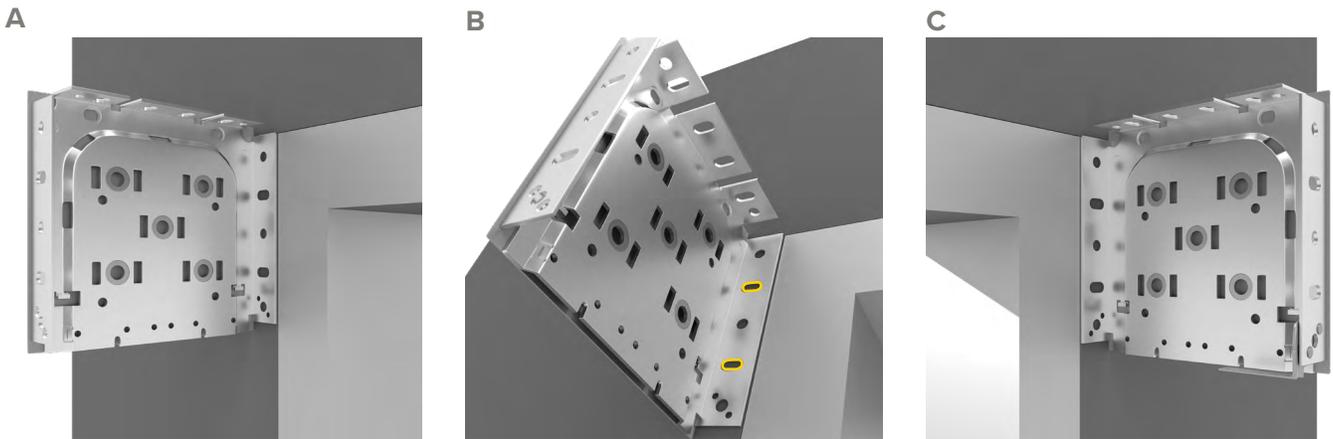

4 SCREW INSTALLATION

Next, pre-drill marked screw holes. Install the brackets with the provided screws using the hex head driver.

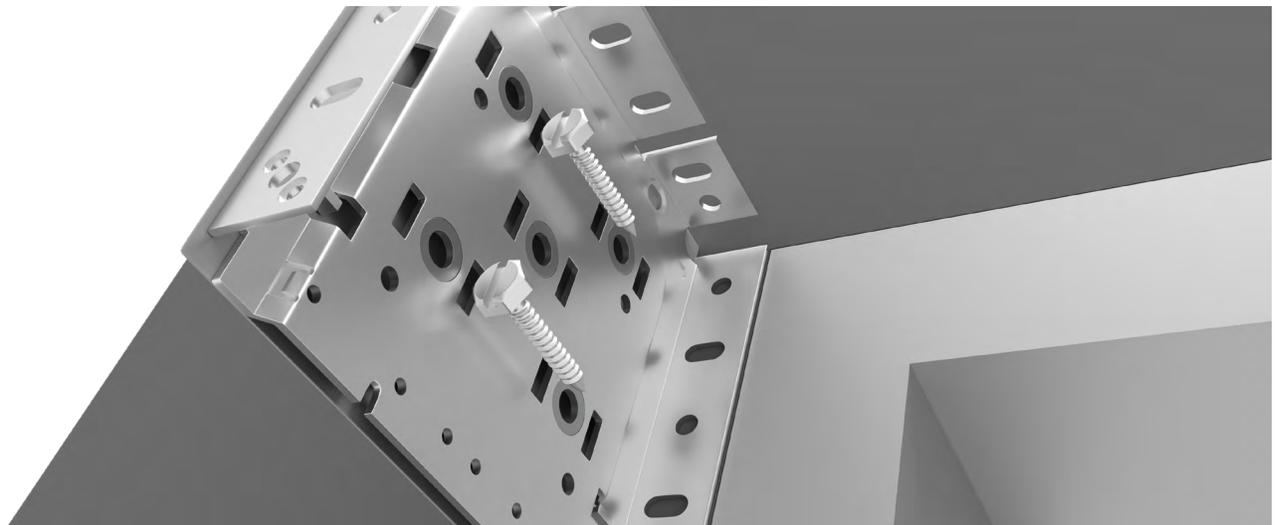

5 ALIGNMENT


Check to make sure your brackets are level and aligned.




6 SHADE PIN END INSTALLATION

Depress pin end and slide onto bracket until pin engages in center hole. Press idler shaft all the way to the bracket.

A

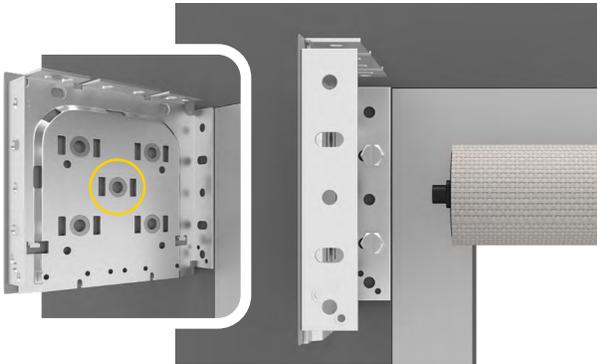


B

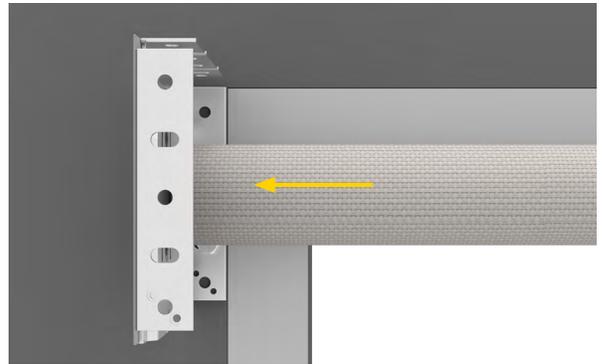


7 MOTOR END INSTALLATION

Lineup to motor bracket. Push motor into motor bracket.

A

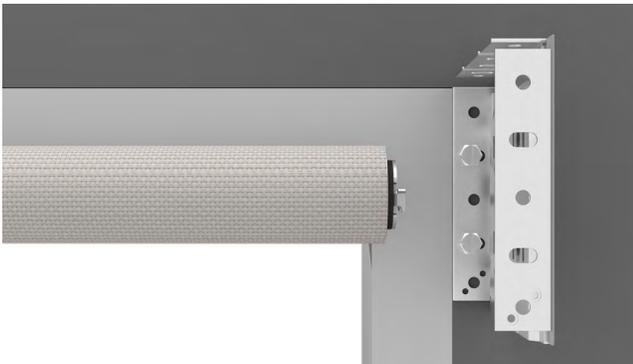


B

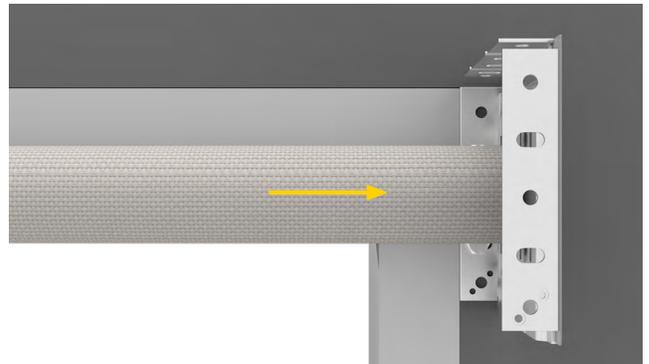

8 FASCIA INSTALLATION

Install bottom or top fascia.

A BOTTOM FASCIA

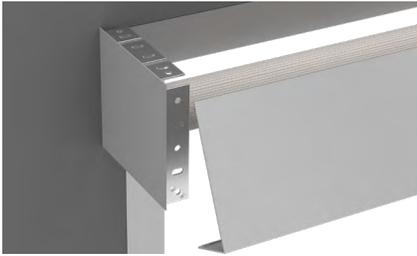

B TOP FASCIA




9 PLUG IN MOTOR

- Run motor power cord to nearest power outlet.
- Install wire tie pads and secure with zip ties to hold wire down.
- The path of the wire should be parallel with mullions and/or drop ceiling tiles ensuring the cable is neatly organized.
- Any modifications to the power cable should be done by a certified electrician to meet your city/state code requirements.



10 SHADE ADJUSTING (IF NECESSARY)

- Roll shade up and down to confirm hembar is level and material rolls up straight on center tube.
- If the hembar is not level, lower shade until you see the metal tube.
- Add layers of masking tape to the metal tube to the end that is too low until hembar is straight.
- If the material tracks to one side, lower shade until you see the metal tube.
- Add layers of masking tape to the metal tube to the end that is opposite the direction of tracking, until shade rolls up straight.

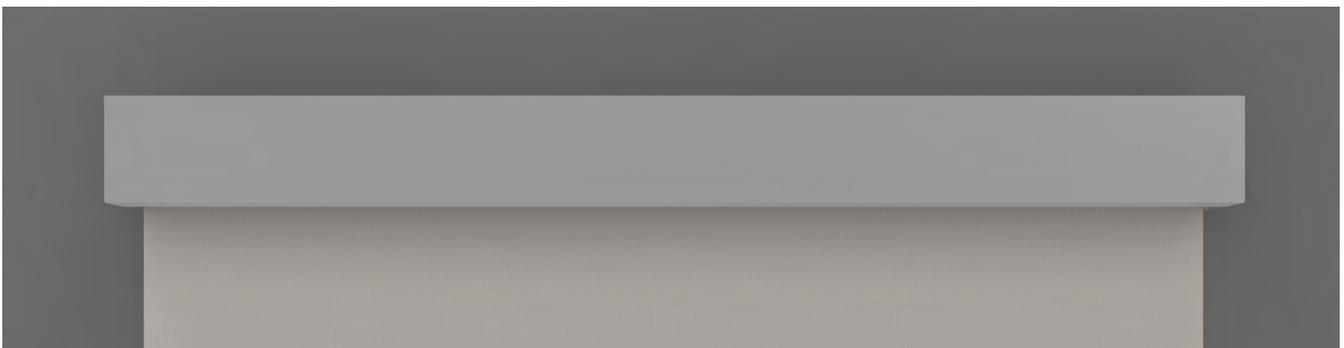

11 ADJUSTING LIMITS (IF NECESSARY)

See programming instructions based on the motor used for your application.